

Aspire

**Aspire User Programming
Browser User Guide
- UB Level**

P/N 0893418

Rev 1, October 2006

Printed in U.S.A.

5.9c

Technical Support Web Site:
<http://ws1.necii.com> (registration is required)

This manual has been developed by NEC Unified Solutions, Inc. It is intended for the use of its customers and service personnel, and should be read in its entirety before attempting to install or program the system. Any comments or suggestions for improving this manual would be appreciated. Forward your remarks to:

NEC Unified Solutions, Inc.
4 Forest Parkway
Shelton, CT 06484
necunifiedsolutions.com

Nothing contained in this manual shall be deemed to be, and this manual does not constitute, a warranty of, or representation with respect to, any of the equipment covered. This manual is subject to change without notice and NEC Unified Solutions, Inc. has no obligation to provide any updates or corrections to this manual. Further, NEC Unified Solutions, Inc. also reserves the right, without prior notice, to make changes in equipment design or components as it deems appropriate. No representation is made that this manual is complete or accurate in all respects and NEC Unified Solutions, Inc. shall not be liable for any errors or omissions. In no event shall NEC Unified Solutions, Inc. be liable for any incidental or consequential damages in connection with the use of this manual. This document contains proprietary information that is protected by copyright. All rights are reserved. No part of this document may be photocopied or reproduced without prior written consent of NEC Unified Solutions, Inc.

©2006 by NEC Unified Solutions, Inc. All Rights Reserved.
Printed in U.S.A.

Microsoft and Windows are registered trademarks of Microsoft Corporation.

Table of Contents

Introduction	1
Operation	3
Logging In to UserPro	3
Feature Programming	5
Telephone Settings Category:	5
Extension Name	6
Night Mode Switching (Own Group)	6
Call Forward - Immediate/No Answer/Both Ring	7
Call Forward - Busy	7
Trunk Ring Tones	8
Extension Ring Tones	8
LCD Language Selection	9
Toll Restriction Override Password Setup	9
User Programming Password	9
Function Key Assignment Category:	10
Programmable Function Keys	10
Virtual Extension Ring Assignment Category:	14
Virtual Extension Ring Assignment	14
One-Touch Key Assignment Category:	15
One-Touch Key Assignment	15

Table of Contents

Introduction

The User Programming Browser (UserPro) provided by the Aspire system allows you the ability to adjust certain system programs which affect the operation or display of your telephone.

Access to the UserPro screen is through an internet browser (i.e., Microsoft's Internet Explorer). By entering the IP address for the system, the browser screen displays a log-in window. The programs accessible to you are based on your log-in type. There are two password levels for the UserPro application - UA and UB. This user guide describes the options available with the UB level. For details on the UA level, please refer to the UA Level User Guide (P/N 0893417).

Up to 4 users can be logged in simultaneously. *Log in is only possible when the phone is idle. The keyset for the logged in extension will be placed in a locked state until the user logs out of programming.*

Based on the system programming, you could have access to the programs displayed below. The access to these programs can be restricted based on the UserPro setup or by your extension's Class of Service. When restricted by the UserPro setup, the option will either not be displayed or will not be active (greyed out). If an option is restricted based on your extension's Class of Service, the program will not accept the change and, instead, will display an error message on the screen.

Name	System Program (Reference Only)
Telephone Settings Category:	
Extension Name	15-01-01
Night Mode Switching (Own Group)	11-10-01
Call Forward - Immediate/No Answer/Both Ring	11-11-01, 11-11-03, 11-11-05
Call Forward - Busy	11-11-02
Trunk Ring Tones	11-11-20
Extension Ring Tones	11-11-20
LCD Language Selection	15-02-01
Toll Restriction Override Password Setup	21-07
User Programming Password	90-28
Function Key Assignment Category:	
Programmable Function Keys	15-07
Virtual Extension Ring Assignment Category:	
Virtual Extension Ring Assignment	15-09
One Touch Key Assignment Category:	
One Touch Key Assignment	15-14

Introduction

Conditions

- Up to 4 users can access the system simultaneously, but they must log in with different user accounts.
- Log in is only possible when the phone is idle. The keyset for the logged in party will be placed in a locked state until logged out of user programming.
- The displayed language is based on the language used for the telephone system. If the language is changed, all the user screens are changed to the new language.
- While a user is logged in with the User Programming web browser, the system cannot be accessed by the PCPro application until the user logs out (however, WebPro and telephone program access is still possible).
- Your extension's Class of Service settings will override program access to any of the displayed UserPro items. If a particular program is restricted to you, an error message will be displayed when you try and change the program.

Operation

The connection for the UserPro is made through a network connection to the Aspire system's IP address. If you need further details on making this connection, contact your system administrator.

Logging In to UserPro

1. Make sure the network connection is available (i.e.; LAN cable is connected from the PC to the Aspire S/Aspire system).
Use a straight-through cable if connected through a hub. If connected directly to the Aspire S/Aspire LAN connector, use a cross-connect cable. Contact your system administrator if needed.
2. With either Internet Explorer or Netscape Navigator installed, open the internet browser application.
3. Enter the IP address of the Aspire system (example: http://172.16.0.10).
Your system administrator can provide the IP address.
4. When the connection to the system is made, you'll see the opening page requesting a user name and password.




The screenshot shows a web browser window displaying the login page for Aspire WebPro. The page has a blue background. In the top left corner, there is a white box with the text 'NEC'. In the center, the text 'Aspire WebPro' is displayed in a stylized font. On the right side, there are two white input fields: the top one is labeled 'User Name' and the bottom one is labeled 'Password'. In the top right corner, there is a small white circle containing a checkmark. At the bottom center, the text '06.00 (US Release, M/L)' is visible.

5. For the **User Name**, enter your extension number. For the **Password**, enter your assigned password (by default: 1111).
Your system administrator can advise you of the password to be used.
6. Click the **Checkmark** icon to proceed.

Operation

- Once the User Name and Password have been accepted, the main window appears.

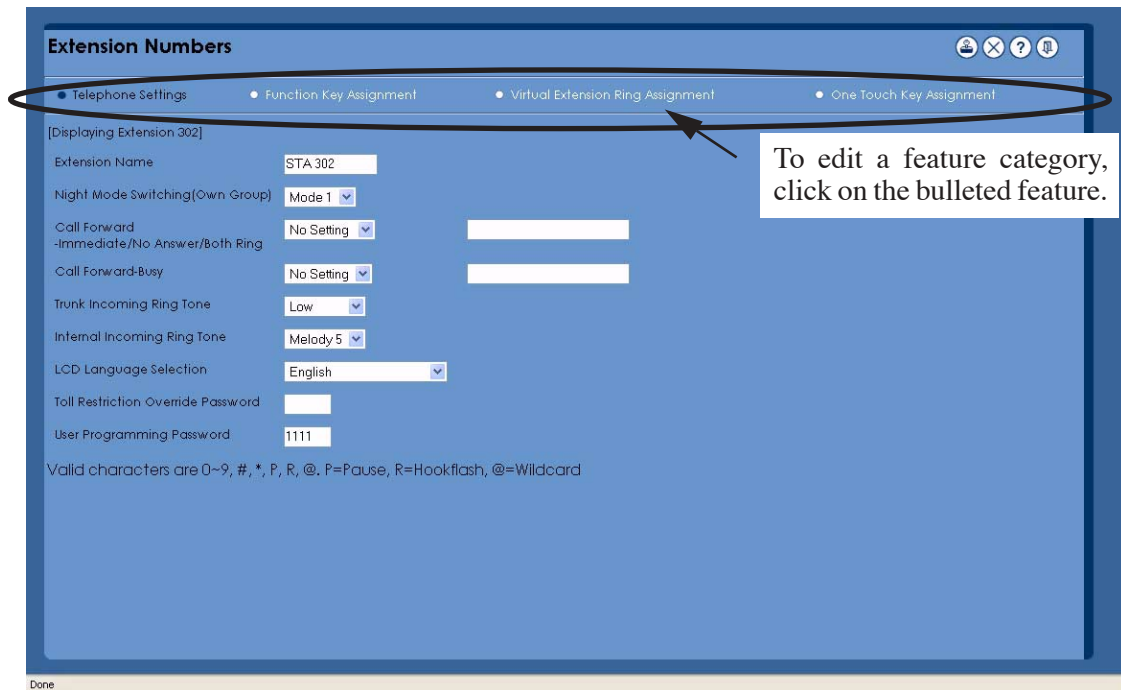

- To make changes to an option, click on the bulleted feature category across the top, then make the change for the displayed item(s).

Details on the individual feature settings and any additional data required are described in the next section.

- After making changes in a window, click on the **APPLY**  icon to accept the changes. The system

is immediately updated. Click on the **CANCEL**  icon to cancel any changes on the current screen and return to the opening page.

If there are any changes on the page which have not be submitted when the CANCEL icon is clicked, a window is displayed allowing you the option to submit them (OK) or cancel the changes (CANCEL).

- When you wish to exit UserPro, click the **LOGOUT**  icon.

If you do not make any changes for 15 minutes, the system will automatically log you out of programming. Any changes on screen which were not applied will be lost.

- Close your internet browser application.

Feature Programming

Telephone Settings Category:

The screenshot displays the 'Extension Numbers' configuration interface for extension 302. The page is divided into four tabs: 'Telephone Settings' (selected), 'Function Key Assignment', 'Virtual Extension Ring Assignment', and 'One Touch Key Assignment'. The 'Telephone Settings' tab contains the following fields:

- Extension Name: STA 302
- Night Mode Switching(Own Group): Mode 1
- Call Forward -Immediate/No Answer/Both Ring: No Setting
- Call Forward-Busy: No Setting
- Trunk Incoming Ring Tone: Low
- Internal Incoming Ring Tone: Melody 5
- LCD Language Selection: English
- Toll Restriction Override Password: [Empty]
- User Programming Password: 1111

Below the fields, a note states: 'Valid characters are 0-9, #, *, P, R, @. P=Pause, R=Hookflash, @=Wildcard'. Three callouts provide additional information:

- An arrow points to the 'Telephone Settings' tab with the text: 'Click the Telephone Settings link to define these options.'
- An arrow points to the 'Call Forward-Busy' field with the text: 'Additional data for the option is entered in this field..'
- An arrow points to the 'Valid characters' note with the text: 'If a function requires an entry in the "Additional Data" field, the type of data required will be displayed here.'

Feature Programming

Extension Name

Extensions can have customized names instead of just indicating the extension numbers. These names show on a keyset's display when you place or answer calls. Extension names make it easier to identify callers. You do not have to refer to a directory when processing calls. A name can be up to 12 digits long, consisting of alphanumeric characters, punctuation marks and spaces.

Item	Entries
<p>Extension Name Set the extension/virtual extension name.</p> <p>When entering names for use with IntraMail's Directory Dialing, <i>do not use non-alpha characters</i>. To separate a first name from a last name, enter a space as a delimiter. By default, there are no extension names entered. You can enter names in any of the following formats:</p> <ul style="list-style-type: none">• First• Last• First (space) Last• Last (space) First	<p>Up to 12 Characters (A-Z [upper and lower case letters available], space, or punctuation)</p>

Night Mode Switching (Own Group)

Night Service lets you activate one of the Night Service modes. Night Service redirects calls to the night mode destination (determined by system programming). The system allows Night Service to be enabled for each Night Service group, allowing each group to determine when their calls should switch modes. You typically activate Night Service after normal working hours, when most employees are unavailable to answer calls.

There are four (Aspire S) or eight (Aspire M/L/XL) Night Service modes:

- Day 1 / Day 2 Modes - for normal working hours
- Night 1 / Night 2 Modes - after hours (usually evening)
- Midnight 1 / Midnight 2 Modes - late at night to early in the morning
- Rest 1 / Rest 2 Modes - interval usually used for lunch

Item	Drop-Down List Entries
<p>Night Mode Switching Manually switch night modes for your Night Service group by selecting one of the 8 night modes.</p>	<ul style="list-style-type: none">• Mode 1 = Day 1• Mode 2 = Night 1• Mode 3 = Midnight 1• Mode 4 = Rest 1• Mode 5 = Day 2• Mode 6 = Night 2• Mode 7 = Midnight 2• Mode 8 = Rest 2

Call Forward - Immediate/No Answer/Both Ring

Call Forwarding permits you to redirect your calls to another extension. Call Forwarding ensures that your calls are covered when you are away from your work area. The types of Call Forwarding which can be set with this option using the UserPro browser are:

- **Call Forwarding Immediate**
All calls forward immediately to the destination, and only the destination rings.
- **Call Forwarding when Unanswered**
Calls forward only if they are unanswered (Ring No Answer).
- **Call Forwarding with Both Ringing**
All calls forward immediately to the destination, and both the destination and the forwarded extension ring (not for Voice Mail).

Item	Drop-Down List Entries	Additional Data
<p>Call Forward Immediate/No Answer/Both Ring Select the Call Forward option for your extension. Note: Only valid extension numbers can be assigned as the destination. If you enter a number which is not assigned, you will receive an error message. <i>To set Call Forward-Busy, refer to the following feature.</i></p>	<ul style="list-style-type: none"> • No Setting • Immediate • No Answer • Both Ring 	<p>Enter the extension number which should received the forwarded calls (valid digits: 0-9).</p>

Call Forward - Busy

Call Forwarding permits you to redirect your calls to another extension when your extension is busy. Call Forwarding ensures that your calls are covered even if you're unavailable.

Item	Drop-Down List Entries	Additional Data
<p>Call Forward Busy Select the Call Forward option for your extension. Note: Only valid extension numbers can be assigned as the destination. If you enter a number which is not assigned, you will receive an error message. <i>To set Call Forward-Immediate/No Answer/Both Ring, refer to the previous feature.</i></p>	<ul style="list-style-type: none"> • No Setting • Busy 	<p>Enter the extension number which should received the forwarded calls (valid digits: 0-9).</p>

Feature Programming

Trunk Ring Tones

You can change the way incoming trunk calls ring your phone. Selectable Ring Tones allows you to set up unique ringing for your calls. This is important in a crowded work area where several phones are close together. Because your phone has a characteristic ring, you always can tell when it's your phone ringing.

Refer to **Extension Ring Tones** (below) to change tones for intercom calls.

Item	Drop-Down List Entries
Trunk Incoming Ring Tone Select the ring tone which should be used for incoming trunk calls ringing your phone.	<ul style="list-style-type: none">• High• Medium• Low• Melody 1• Melody 2• Melody 3• Melody 4• Melody 5

Extension Ring Tones

You can change the way incoming ICM calls ring your phone. Selectable Ring Tones allows you to set up unique ringing for your calls. This is important in a crowded work area where several phones are close together. Because your phone has a characteristic ring, you always can tell when it's your phone ringing.

Refer to **Trunk Ring Tones** (above) to change tones for incoming trunk calls.

Item	Drop-Down List Entries
Internal Incoming Ring Tone Select the ring tone which should be used for incoming trunk calls ringing your phone.	<ul style="list-style-type: none">• High• Medium• Low• Melody 1• Melody 2• Melody 3• Melody 4• Melody 5

LCD Language Selection

Your keyset's display provides a 3-line, 24-character per line alphanumeric display that shows various information for the telephone - either while on a call or while idle. Using this option, you can select the language that is used for displaying the information on your telephone.

Item	Entries
<p>LCD Language Selection From the drop-down list, select the language to be used for your extension.</p>	<ul style="list-style-type: none"> • Japanese • English • German • French • Italian • Spanish • Dutch • Portuguese • Norwegian • Danish • Swedish • Turkish • Latin American Spanish

Toll Restriction Override Password Setup

Toll Restriction limits the numbers you may dial. By allowing extensions to place only certain types of calls, the long distance costs can be better controlled. The system applies Toll Restriction according to an extension's Toll Restriction Class.

Toll Restriction Override lets you temporarily bypass the extension's Toll Restriction. This helps if you must place an important call that Toll Restriction normally prevents. For example, if Toll Restriction is set up to block 900 calls, with a Toll Restriction Override code, you could still place the call, if needed.

Item	Entries
<p>Toll Restriction Override Password Enter the 4-digit code to be used for Toll Restriction Override. <i>The entry must be 4-digits in length.</i> <i>Each extension can have a separate code, or many extensions can share the same override code.</i></p>	<p>Any combination of 0-9, #, *</p>

User Programming Password

When accessing the UserPro browser, you need to enter a password before being allowed to make any changes.

Item	Entries
<p>User Programming Password Enter up to 4 digits which will be used as your password when entering the User Programming browser screens.</p>	<p>Any combination of 0-9, #, *</p>

Feature Programming

Function Key Assignment Category:

Programmable Function Keys

Each keyset has Programmable Function Keys. Programmable Function Keys simplify placing calls, answering calls and using certain features. You can customize the function of a keyset's programmable keys. Depending on your telephone style, you can have either 12 or 24 Programmable Function Keys.

When making changes to the Programmable Function Keys, a drop-down list is available to allow you to easily select the function to be programmed.

Select the telephone's key to be defined. If the key is not displayed on the page, enter the key number in the Function key field on the right.

Click the Function Key Assignment link to access this window.

Function Key	Function Number	Additional Data
01	*01-Trunk Line	1
02	*01-Trunk Line	2
03	*04-Park Key	01
04	*04-Park Key	02
05	21-Internal Zone Page	01
06	*01-Trunk Line	
07	00-None	
08	01-DSS/One-Touch	
	02-MIC	
	03-DND	
	04-BGM	
	05-Headset	
	06-Transfer	
	07-Conference	
	08-Incoming Caller ID List	
	09-Day/Night Mode change	
	10-CFV-Immediate	
	11-CFV-Busy	
	12-CFV-No Answer	
	13-CFV-Busy/No Answer	
	14-CFV-Both Ring	
	15-CFV-Follow Me	
	16-CFV to STA	
	17-CFV to Device	
	18-Text Message Setup	
	19-External Zone Page	

If a function requires an entry in the "Additional Data" field, the type of data required will be displayed here.

Select a function from the drop down list.

If required, enter additional program data.

Feature Programming

<p>Function Key Assignment (cont'd) The number of Programmable Function Keys is displayed on the left (Function Key column).</p>	<ul style="list-style-type: none"> • 46 = Department Group Logout • 47 = Reverse Voice Over • 48 = Voice Over • 49 = Call Redirect • 50 = Account Code Key • 51 = General Purpose Relay • 52 = Automatic Answer with Delay Msg Setup • 53 = Automatic Answer with Delay Msg Start • 54 = External CFW by Doorphone Setup • 55 = Extension Name Change • 56 = General Purpose LED Operation • 57 = General Purpose LED Indication • 58 = Automatic Transfer at Department Group • 59 = Delayed Transfer at Department Group • 60 = DND at Department Group Call • 61 = None • 62 = None • 63 = Caller ID Restriction Mode • 64 = None • 65 = None • 66 = CTI Communication • 67 = Mail Box (DSPDB) • 68 = Voice Mail Service (DSPDB) • 69 = Record Service (DSPDB) • 70 = Automated Attendant (DSPDB) • 71 = Change Attendant Message (DSPDB) • 72 = Keypad Facility • 73 = Keypad HOLD Key • 74 = Keypad RETRIEVE • 75 = Keypad Conference • 76 = Toll Restriction in Credit • 77 = Voice Mail (In-Skin VM) • 78 = Conversation Recording (In-Skin) • 79 = Automated Attendant (In-Skin) • 80 = Tandem Ringing Setup Up Key • 81 = Automatic Transfer to Transfer Key • 82 = DtermIP Call Log • 83 = Conversation Recording Function (In-Skin) • 84 = None • 85 = Directory Dialing (M/L only) 	<ul style="list-style-type: none"> - None - • Extension number (up to 8 digits) - None - • Extension or voice mail number (up to 8 digits) - None - • 0, 1-8 = Relay number • 1-8 (Aspire S) or 001-100 (Aspire M/L/XL) = Incoming Ring Group number - None - - None - - None - - None - • Enter the LED number: 001-100 (on red), 101-200 (on green), 201-300 (red on or green on) • 01-64 = Extension Group number 1-64 • 01-64 = Extension Group number 1-64 • 01-64 = Extension Group number 1-64 - None - - None - - None - - None - - None - - None - • <i>Not used in the U.S.</i> • <i>Not used in the U.S.</i> • <i>Not used in the U.S.</i> • <i>Not used in the U.S.</i> • <i>Not used in the U.S.</i> - None - - None - - None - - None - - None - • Extension number (up to 8 digits) - None - • Extension or Department Group number (up to 8 digits) • Extension number (up to 8 digits-analog or Aspire Wireless extension only) • 001-200 = Trunk number 1-200 - None - • <i>Not used in the U.S.</i> - None - - None -
---	--	--


<p>Function Key Assignment (cont'd) The number of Programmable Function Keys is displayed on the left (Function Key column).</p>	<ul style="list-style-type: none"> • 86 = Private Call Refuse • 87 = Caller ID Refuse • 88 = Dial-In Mode Switching • 89 = None • 90 = None • 91 = None • 92 = None • 93 = None • 94 = Call Attendant • 95 = None • 96 = None • 97 = None • 98 = None • 99 = None • *00 = None • *01 = Trunk Line • *02 = Trunk Group Access • *03 = Virtual Extension • *04 = Park Key • *05 = Hybrid Operation Key/Loop • *06 = Trunk Access via Networking • *07 = Station Park Hold • *08 = None • *09 = None • *10 = ACD Log In/Log Out (M/L only) • *11 = None • *12 = ACD Emergency Call (M/L only) • *13 = ACD Off-Duty mode (Rest Mode (M/L only) • *14 = ACD Operation End/Start (M/L only) • *15 = ACD Terminal Speech Monitor (M/L only) • *16 = ACD Waiting (M/L only) • *17 = ACD Work Wrap Up Time (M/L only) • *18 = ACD Overflow Control Key (M/L only) • *19 = ACD Queue Status Display (M/L only) • *20 = None 	<ul style="list-style-type: none"> - None - - None - • 01-20 (Aspire S) or 001-100 (Aspire M/L/XL) = Program 22-17 table number - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - • 1-8 (Aspire S) or 001-200 (Aspire M/L/XL) = Trunk number • 1-8 (Aspire S) or 001-100 (Aspire M/L/XL) = Trunk Group number • Extension or Department Group number (up to 8 digits) • 01-64 = Park orbits 1-64 • 0 = Incoming, 1 = Outgoing, 2= Both • 01-50 = Network system number 1-50 - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None - - None -
---	--	--

Virtual Extension Ring Assignment Category:

Virtual Extension Ring Assignment

Multiple Directory Numbers (virtual extension) let a keyset have more than one extension number. Calls can route to the keyset's installed number or to the keyset's "virtual extension" Multiple Directory Number key. This helps users identify incoming calls. For example, an extension installed at 304 (Sales) could have a virtual extension for 460 (Service). Calls to 304 ring the extension normally. Calls to 460 ring the Multiple Directory Number key. This lets the user at extension 304 differentiate Sales calls from Service calls.

Use this screen to assign the ringing options for your extension's Virtual Extension Key or Virtual Department Group Answer Key which is set up in the Function key Assignment link. You determine the ringing assignment for each Night Service Mode.

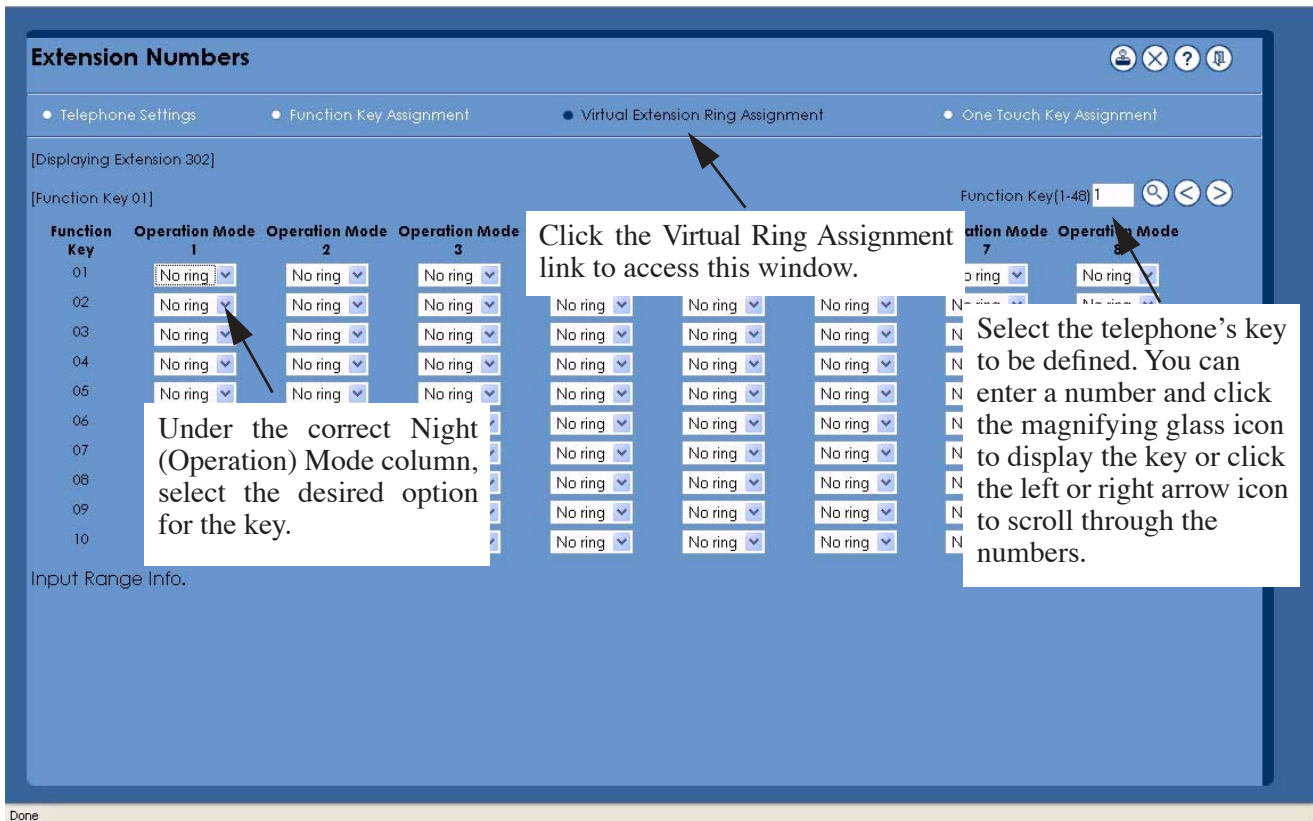

Item	Drop-Down List Entries
Virtual Extension Ring Assignment From the drop-down list, select the ringing option for the key.	<ul style="list-style-type: none"> No Ring Ring

One-Touch Key Assignment Category:

One-Touch Key Assignment

One-Touch Calling gives you one button access to extensions, trunks and selected system features. This saves time when accessing co-workers, clients and features used most often. Instead of dialing a series of codes, you only need to press the One-Touch Key. Each phone provides 10 One-Touch keys. You can have One-Touch Keys programmed for:

- **Direct Station Selection** - one button access to extensions
- **Personal Speed Dial** - one button access to stored numbers (up to 24 digits long)
- **Abbreviated Dialing** - one button access to stored Abbreviated Dialing numbers
- **Trunk Calling** - one button access to trunks or trunk groups
- **Service Codes** - one button access to specific Service Codes

Item	Entries
<p>One-Touch Key Assignment For each One-Touch Key, define the destination number and name.</p>	<p>Number:</p> <ul style="list-style-type: none"> • Enter the destination number, up to 24 digits (valid digits: 0-9, #, *, P, R, @). <i>P=Pause, R=Hookflash, @=Wildcard</i> <p>Name:</p> <ul style="list-style-type: none"> • Enter the name, up to 12 characters.

Feature Programming

- For Your Notes -

NEC

NEC Unified Solutions, Inc.
4 Forest Parkway, Shelton, CT 06484
Tel: 800-365-1928 Fax: 203-926-5458
www.necunifiedsolutions.com

Other Important Telephone Numbers

Sales:	203-926-5450
Customer Service:	203-926-5444
Customer Service FAX:	203-926-5454
Technical Service:	203-925-8801
Discontinued Product Service:	900-990-2541
Technical Training:	203-926-5430
Emergency Technical Service (After Hours)	203-929-7920

(Excludes discontinued products)

NEC

NEC Unified Solutions, Inc.
4 Forest Parkway, Shelton, CT 06484
TEL: 203-926-5400 FAX: 203-929-0535
www.necunifiedsolutions.com

(0893418)

October 13, 2006, Rev 1

Printed in U.S.A.